 

















Nevco Scoreboard MPC-6 for Hockey

A GUIDE TO SET THINGS UP & FIX THEM QUICKLY





Turning the board on - Resetting

1. Turn on, display will read:
"Start where you turned off last YES or NO"
 2. Press , display will read: *"I am your Nevco MPC-6. Please enter your model code."*
 3. Enter code    and the display will read: *"Do you want to use penalty time out YES or NO?"*
 4. Press , display will read:
"0:00.0 DN"
- ...Now you're ready to set up some hockey!





Setting the game time - Preparing the period

1. Press  then 
2. Enter the time for the period
(minutes : seconds)
    and press 
- The display will read: *"Period 0"*
3. Enter the period #, , , or 
4. Press 










Entering a goal - Adding to the score

1. Press  or 
2. Select  (Not 2, 3, 4... etc)
3. Press 




Correcting the score - When you've got too many

1. Press  then  or 
2. Enter the correct number of goals
(2, 3, 4... etc)
3. Press 

Adding a penalty

1. Press  then  or 
2. Enter the penalty time.
(minutes : seconds)
   
- Example: and the display will read: *"Y/N 02:00"*
3. If correct, press  - if not press 
4. The display will read: *"G./H. player #"*
Enter the player's jersey number or a 2-digit number

Removing a penalty

1. Keep pressing the  or  button until the desired penalty appears in the display
2. Press the  button and the display will read: *"Clear (Y/N)"*
3. Press 